SECTION 11110

TUMBLE DRYER, 25 LB. (11.3 KG) CAPACITY

PART 1 **GENERAL**

1.01 SECTION INCLUDES:

Automatic laundry dryer for processing water-washed linen items

1.02 SYSTEM DESCRIPTION

DESIGN REQUIREMENTS:

1. Dry weight capacity: 25 lb. (11.3 kg)

2. Cylinder volume: 7.66 cu ft (216907 cu cm) minimum

3. Construction: Heavy duty embossed steel with e-coat and baked enamel

power paint

4. Input voltage: 120/208-240/60/1

5. Heat source: Gas, natural, 1/2 inch (13 mm) NPT

6 Overall width: 28 inches (711 mm) nominal

7. 63-7/8 inches (1622 mm) nominal Overall height: 8. Overall depth: 40-7/8 inches (1038 mm) nominal

9. Exhaust size: 6 inch (152 mm)

10. Control system: Microprocessor touchpad control

11. Stainless steel door: High grade stainless steel door with 7/8 inch (22 mm) rubber

gasket and heavy duty hinge

B. PERFORMANCE REQUIREMENTS:

1. BTU input: 64,000

2. Airflow: 500 CFM (14.2 CMM)

1/4 hp cylinder and 1/4 hp fan 3. Motor horsepower:

Control system

a. Programming methods: Machine keypad, Infrared (PC or PDA)

b. 30-Cycle Capability

c. PC software to program machine and/or audit machine performance

d. Record last eight machine errors by date and time

e. Over Dry Prevention Technology (OPTidry (TM)) system utilizes two cylinder lifters as sensors (note: some capacities only have one sensor lifter)

- f. Maintenance-free rotary transfer switch communicates signal between OPTidry^(TM) sensor/lifters and control
- g. Wrinkle free at cycle end allowing 30 seconds of tumble and 1-1/2 minutes of rest until door opens or maximum of one hour
- 5. Lint filter: 480 sq. inch (3097 sq. cm), self cleaning, depositing lint to

large storage area at bottom of tumbler

1.03 DELIVERY, STORAGE AND HANDLING

A. ACCEPTANCE AT SITE:

1. Inspect machine for damage prior to acceptance. If damage is found, follow freight handler's procedure for claims.

B. STORAGE AND PROTECTION

- 1. Machine should be stored in a site protected from weather, direct sunlight and temperature extremes. Do not remove packaging prior to storage.
- 2. If machine is to be stored for an extended period of time, consult manufacturer for special requirements.

1.04 WARRANTY

A. Warranty Period: Three years, limited, parts only, commencing on Date of Substantial completion

1.05 SYSTEM STARTUP AND COMMISSIONING

A. Machine installation should be inspected by local manufacturer's representative prior to startup and operation. The party installing the machine is responsible for setting the schedule for this inspection.

PART 2 PRODUCTS

2.01 MANUFACTURERS

 A. Alliance Laundry Systems LLC - UniMac, obtain commercial laundry equipment from a single manufacturer

2.02 QUALIFIED MODELS

A. UniMac model **UT025NEO** (no substitutions permitted)

PART 3 EXECUTION

3.01 INSTALLATION


A. Refer to and comply with manufacturer's installation instructions. Do not deviate without permission from site owner, architect, general contractor and manufacturer's local representative.


Machine Dimensions and Specifications


Models UT025L and UT025N




Dimensions

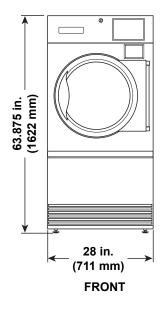

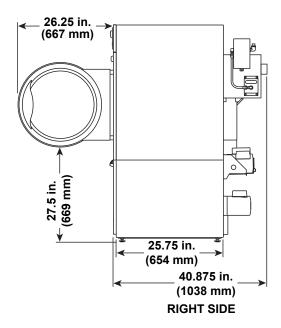

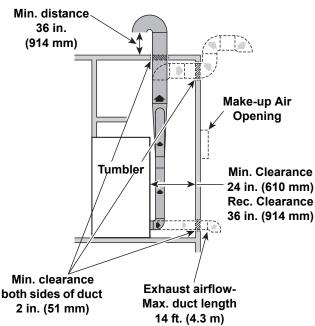

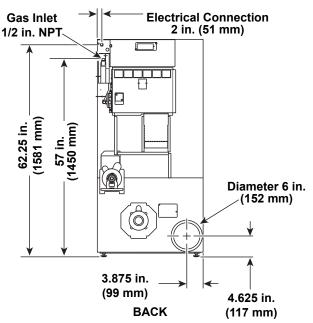

Specifications

Net Weight	300 lbs.
Make-up Air Opening	110 sq. in.
Maximum Airflow per Pocket: C.F.M.	500
Maximum Static Back Pressure: Inches W.C.	0.8
Gas Burner Rating:	64,000 Btu/hr

Electrical Specifications

Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Fuse or Breaker Rating (Amps)	Breaker Poles	AWG
B2	120	60	1	2/3	12	15	1	14
F6	200-208, 240	60	3	3	3.2	10*	3	14
G2	208-240	60	1	2/3	6.7	10	2	14
Q1	460-480	60	3	3	1.6	10*	3	14

^{* 3} Phase machines should not have fuses, breakers only.

TMB28F