# **SECTION 11110**

# DRYING TUMBLER, 75 LB. (34 KG) CAPACITY

#### PART 1 **GENERAL**

- 1.01 SECTION INCLUDES:
  - Automatic laundry dryer for processing water-washed linen items
- 1.02 SYSTEM DESCRIPTION
  - **DESIGN REQUIREMENTS:**

1. Dry weight capacity: 75 lb. (34 kg)

2. Cylinder volume: 22.4 cu ft (634297 cu cm) minimum

3. Construction: Heavy duty embossed steel with e-coat and baked enamel

powder paint

4. Input voltage: 208-240/60/3

5. Heat source: Gas, natural, 3/4 inch (19 mm) NPT 6 Overall width: 38-5/8 inches (981 mm) nominal 7. 76-5/8 inches (1946 mm) nominal Overall height: 8. Overall depth: 53 inches (1346 mm) nominal

9. Exhaust size: 10 inch (254 mm)

10. Control system: Microprocessor touchpad control

11. Door: High grade stainless steel reversible door with 7/8 inch

(22 mm) rubber gasket and heavyduty hinge

**B. PERFORMANCE REQUIREMENTS:** 

1. BTU input: 225.000

2. Airflow: 1100 CFM (31.1 CMM) 1 hp fan and 1/3 hp cylinder 3. Motor horsepower:

- 4. Reversing cylinder
- 5. Control system
  - a. Programming methods: Machine keypad, Infrared (PC or PDA)
  - b. 30-Cycle Capability
  - c. PC software to program machine and/or audit machine performance
  - d. Record last eight machine errors by date and time
  - e. Over Dry Prevention Technology (OPTidry (TM)) system utilizes two cylinder lifters as sensors (note: some capacities only have one sensor lifter)
  - f. Maintenance-free rotary transfer switch communicates signal between OPTidry<sup>(TM)</sup> sensor/lifters and control
  - g. Wrinkle free at cycle end allowing 30 seconds of tumble and 1-1/2 minutes of rest until door opens or maximum of one hour
- 6. Lint filter: 576 sq. inch (3716 sq. cm), self cleaning, depositing lint to

large storage area at bottom of tumbler

### 1.03 DELIVERY, STORAGE AND HANDLING

#### A. ACCEPTANCE AT SITE:

1. Inspect machine for damage prior to acceptance. If damage is found, follow freight handler's procedure for claims.

#### B. STORAGE AND PROTECTION

- 1. Machine should be stored in a site protected from weather, direct sunlight and temperature extremes. Do not remove packaging prior to storage.
- 2. If machine is to be stored for an extended period of time, consult manufacturer for special requirements.

#### 1.04 WARRANTY

A. Warranty Period: Three years, limited, parts only, commencing on Date of Substantial completion

#### 1.05 SYSTEM STARTUP AND COMMISSIONING

A. Machine installation should be inspected by local manufacturer's representative prior to startup and operation. The party installing the machine is responsible for setting the schedule for this inspection.

#### PART 2 PRODUCTS

#### 2.01 MANUFACTURERS

 A. Alliance Laundry Systems LLC - UniMac, obtain commercial laundry equipment from a single manufacturer

#### 2.02 QUALIFIED MODELS

A. UniMac model **UTF75NRE** (no substitutions permitted)

#### PART 3 EXECUTION

#### 3.01 INSTALLATION


A. Refer to and comply with manufacturer's installation instructions. Do not deviate without permission from site owner, architect, general contractor and manufacturer's local representative.

# **Machine Dimensions and Specifications**

Models UTF75L and UTF75N



## **Dimensions**

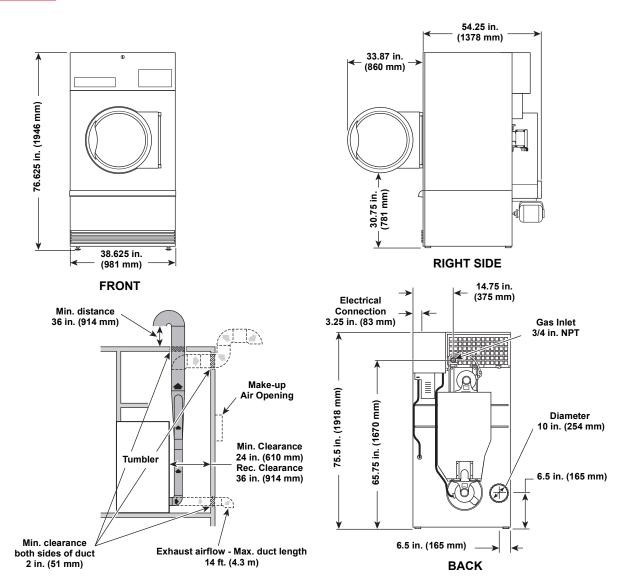

# **Specifications**

Net Weight: Pounds	710
Make-up Air Opening: Square inches	250
Maximum Airflow per Pocket: C.F.M.	1100
Maximum Static Back Pressure: Inches W.C.	0.5
Gas Burner Rating: Btu/hr	225,000

# **Electrical Specifications**

Code	Voltage	Cycle	Phase	Wire	Full Load Amps Reversing	Fuse or Breaker Rating (Amps)	Breaker Poles	DMV
F5	200-208	60	3	3	6.3	15*	3	14
J8	240	60	3	3	6.3	15*	3	14
Q1	460-480	60	3	3	3.1	10*	3	14

<sup>\* 3</sup> Phase machines should not have fuses, breakers only

Part No. 9-10-252R1 March 2011

TMB34F