# **SECTION 11110**

### LAUNDRY WASHER-EXTRACTOR, 60 LB. CAPACITY

#### PART 1 GENERAL

- 1.01 SECTION INCLUDES:
  - A. Automatic laundry washer-extractor for processing water-washed linen items
- 1.02 SYSTEM DESCRIPTION
  - A. DESIGN REQUIREMENTS:

1. Construction: 304 or equal stainless steel cylinder, tub and cover panels

2. Input voltage: O: 208-240/60/3; 3 wire plus ground

F: 440-480/60/3; 3 wire plus ground

3. Dry weight capacity: 60 lb.

Wash cylinder volume: 9.0 cu ft. minimum
Overall width: 34-1/16 inches nominal
Overall height: 49-7/8 inches nominal
Overall depth: 42-9/16 inches nominal

8. Number and size of water

connections: 2 with 3/4 NH male connections

9. Number and size of drain

outlets: 1 at 3 inch

10. Overflow: Internally plumbed

11. Control system: Programmable microprocessor12. Cylinder drive: Direct drive V belt system

2

13. Drive motor: 2.7 hpB. PERFORMANCE REQUIREMENTS:

- TEN ONWATOL REGUNERAL
  - Number of selectable cylinder speeds:

2. G-force at highest

extract speed: 86

- 3. Chemical supply system
  - a. manually filled 4 compartment dry chemical dispensing system
  - b. automatic flushing and connections for 5 external supply lines and control signals for 4 external supplies
- 4. Control system
  - a. Programmable microprocessor; (manual, PDA or laptop PC)
  - b. 9 programmable cycles
  - c. 3 programmable water levels
  - d. Cycle counter
  - e. Thermal cool down
  - f. Water monitoring: slow drain and automatic leak detection system
  - g. Diagnostic capabilities

5. Drain valve automatically opens in event of power failure

#### 1.03 DELIVERY, STORAGE AND HANDLING

#### A. ACCEPTANCE AT SITE:

1. Inspect machine for damage prior to acceptance. If damage is found, follow freight handler's procedure for claims.

#### B. STORAGE AND PROTECTION

- 1. Machine should be stored in a site protected from weather, direct sunlight and temperature extremes. Do not remove packaging prior to storage.
- 2. If machine is to be stored for an extended period of time, consult manufacturer for special requirements.

#### 1.04 SYSTEM STARTUP AND COMMISSIONING

A. Machine installation should be inspected by local manufacturer's representative prior to startup and operation. The party installing the machine is responsible for setting the schedule for this inspection.

#### PART 2 PRODUCTS

#### 2.01 MANUFACTURERS

A. Alliance Laundry Systems LLC - UniMac, obtain commercial laundry equipment from a single manufacturer

#### 2.02 QUALIFIED MODELS

A. UniMac model **UCN060HN2** (no substitutions permitted)

#### PART 3 EXECUTION

#### 3.01 INSTALLATION


A. Refer to and comply with manufacturer's installation instructions. Do not deviate without permission from site owner, architect, general contractor and manufacturer's local representative.

# **Machine Dimensions and Specifications**

Models UCN060GN2, UCN060HN2, UCN060KN2, UCN060HNF and UCN060KNF



# **Dimensions and Foundation Requirements**

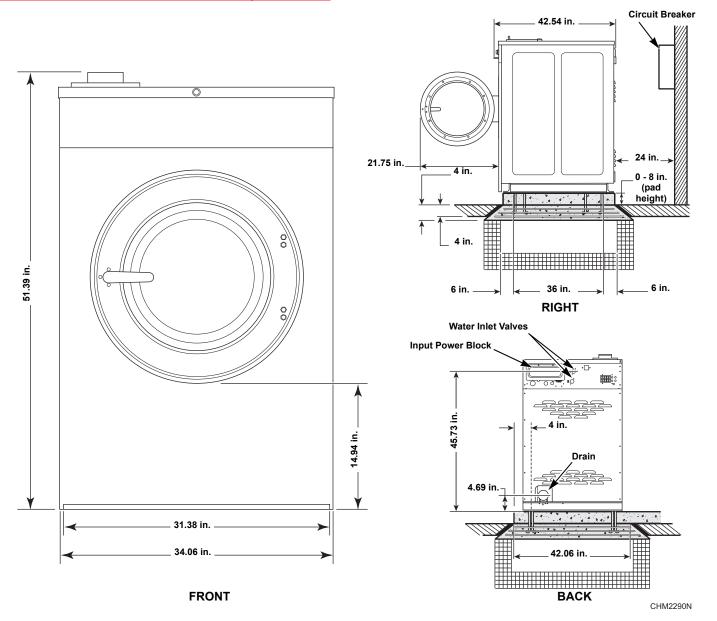

# **Electrical Specifications**

	Voltage	Designat	ion	Non-Electric Heat Machines (Standard)				
Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Breaker (Non Fused)	AWG	mm²
0	208-240	60	3	3	10	20	12	4.0
X	200-240	60	1/3	2/3	11/8	15	14	2.5
F	440-480	60	3	3	5	15	14	2.5

# Water, Drain and Weight Specifications

Drain: Number (Size)	1 (3 in.)			
Water Connections: Number (Size)	2 (0.75 in.)			
Weight: Machine (With Shipping Packaging)	812 lbs. (854 lbs.)			
Side Clearance:	2 in. (from wall) 0.5 in (between machines)			

12-10-380

Part No. 10-09-263R2 March 2011